



# Surround Panels (DVS/DVL EF II)

## Compatibility

- DVS Insert EF II
- DVL Insert EF II

## Packing List

- Top, Right, and Left Side Panels
- Panel Trim (with Hardware)
- (4) 10-24 Type F Thread-Cutting Screws
- (7) Spring Clips

## Part Numbers


- DVS – 4" by 6" 96100300
- DVS – 8" by 10" 96100301
- DVS – 10" by 13" 96100302
- DVL – 4" by 6" 96100320
- DVL – 8" by 10" 96100321
- DVL – 10" by 13" 96100322

## Arched Faces with Screens (2014 or later) Require Use of the Extended Position Holes

This surround panel has 2 sets of holes. Hole position is determined by the face being used (see below)

**Standard Position** – used for all faces except for the new 2014 arched faces with screens. All other faces use the standard position hole. If you are uncertain, use the standard position.

**Extended Position** – used only for new arched faces with screens (2014 or later). The extended position allows room the screen and eliminates the 1/2" gap to the panel. The extended position hole positions the insert 1/2" farther into the fireplace cavity.

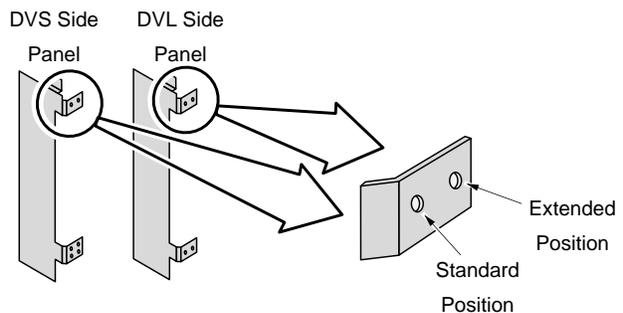

## Rheostat and On/Off Switch Placement on 33 DVI/31 DVI

Install the rheostat and On/Off switch on the right surround side surround panel (see the Owner's Manual for details).


## Inside Fit Panels

The panels may be cut down in size and placed within the fireplace opening. When installed in this configuration, install the rheostat and on/off switch in the control panel under the firebox (see the owner's manual for details). For standard installations, we recommend you attach the rheostat and on/off switch to the upper right surround panel trim (after the trim is installed).

## Installation

Before installation the insert should be in place with the gas line and vent attached. Pull the insert out slightly to assist in the installation. Attach the side panels then the top panel and trim (see the directions below and on the following page).


### DVS / 31 DVI Side Panel Installation

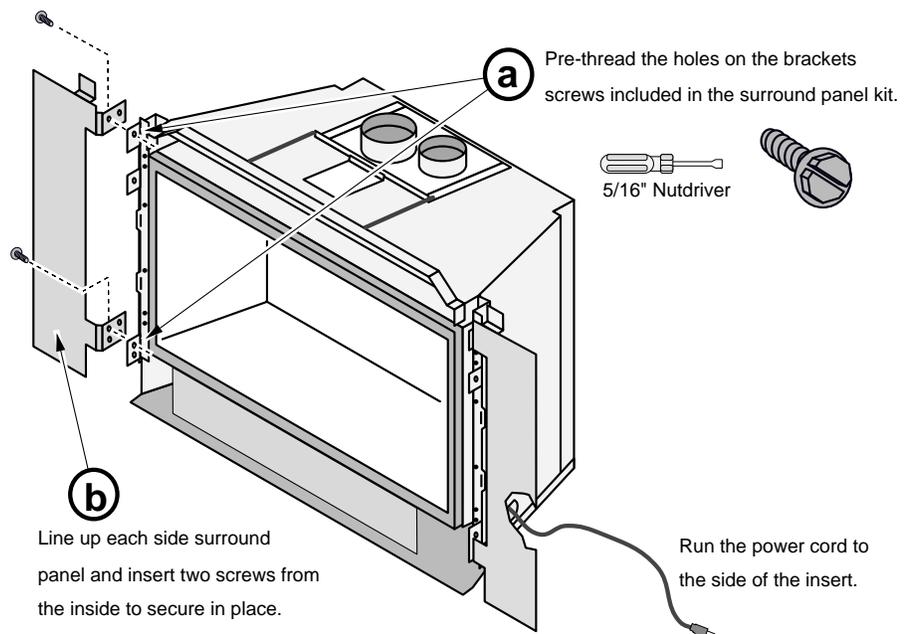



# Surround Panels (DVS/DVL EF II)

## DVL / 33 DVI – Side Panel Installation

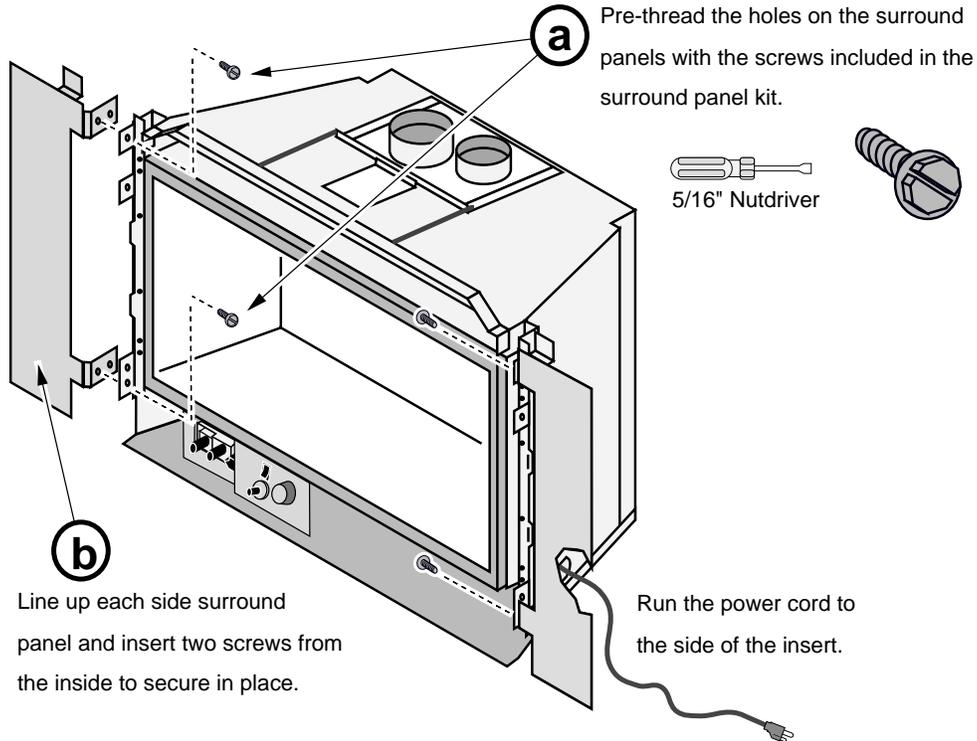

## Top Panel and Trim Installation

