




Packing List

- Rear Fireback
- (2) Side Firebacks

2-Sided Firebacks

On 2-sided firebacks make sure to use the desired pattern and correct orientation.

NOTE: The rear fireback must be installed as shown below for the brick pattern to line up with the side firebacks.

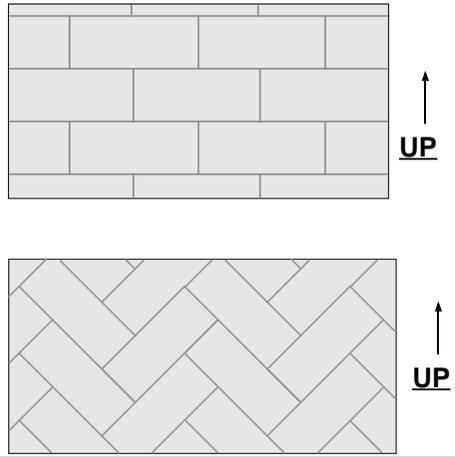

Installation

WARNING Turn off gas to the appliance and make sure it has fully cooled prior to conducting service.


- 1 Remove the glass frame and logs (see the manual for details).
- 2 Follow the steps below to install the firebacks (see illustrations on the following page).
 - a) Remove the burner (see the manual for details).
 - b) For the DVS GSR bend the accent light down (if installed).
 - c) Install the rear fireback (see illustration on the following page).
 - d) Install the side firebacks (see illustration on the following page).
 - e) For the DVS GSR, return the accent light to the correct configuration.
 - f) Replace the burner.
- 3 Restore the appliance to the correct configuration.




DVS GSR / 31 DVI Firebacks

96100100 Brick/Herringbone (2 Sided) - 96100272 Handmade Brick -- 96100273 Reclaimed Brick


Slide the top of the rear fireback behind the baffle on top of the firebox and pivot it back into place. It rests on the shelf at the back of the firebox.

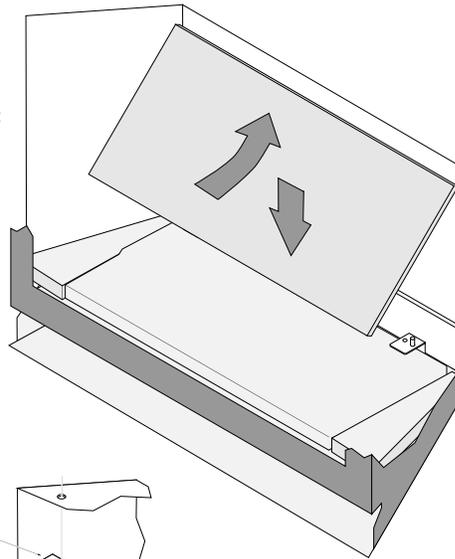

The fireback clip has a keyhole slot. It can be removed by loosening the screw and sliding the clip out.

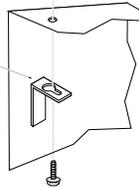

Remove this clip attached to the firebox ceiling (both sides).

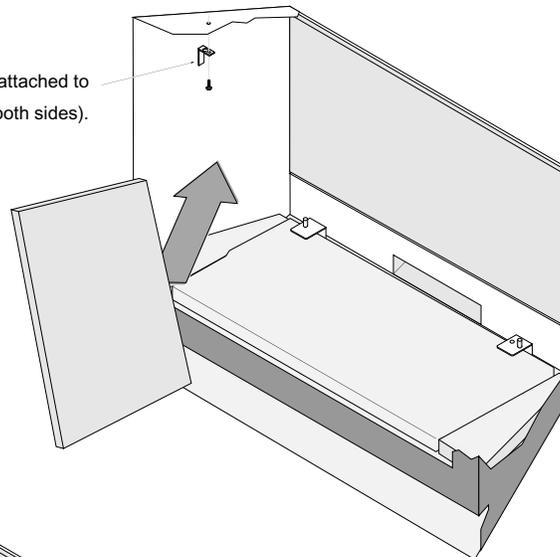

Hold the side firebacks at a slight angle and place them into position (both sides).

Replace the clip to secure the side fireback (both sides).

