



## Small Pedestal (1250 / Answer)

99200122

### Compatibility:


- 1250 Wood Stove
- Answer

### Packing List:

- Pedestal
- (2) 3/8-16 x 3/4" Bolts w Washers
- (2) 5/16" x 3" Lag Bolts w Washers
- Screen with (6) Staples
- Insulation
- Cover Plate Assembly

### Pedestal Attachment

**NOTE:** If using outside air, install it prior to attaching the pedestal (see Outside Air Installation on page 2 and 3).

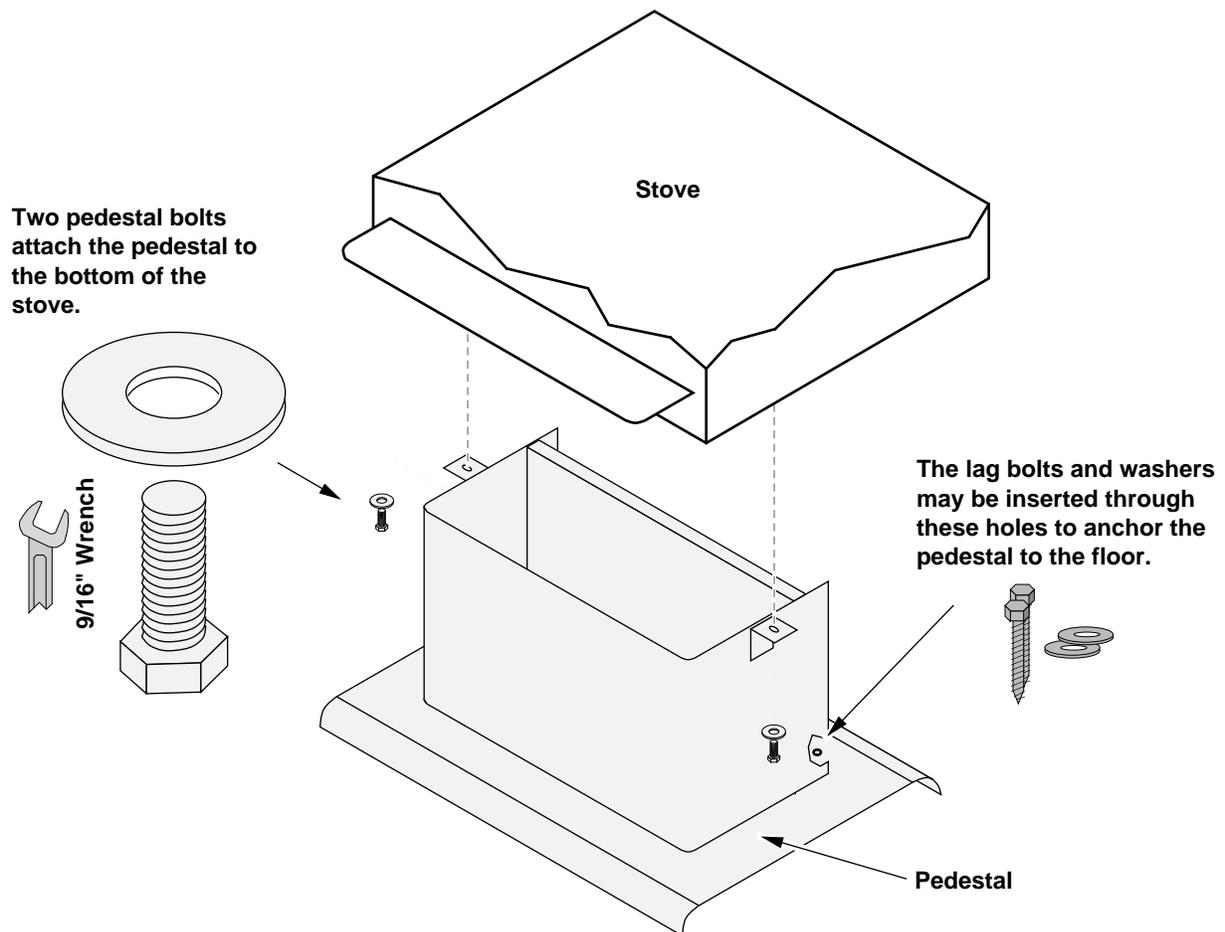




# Small Pedestal (1250 / Answer)


99200122

## Outside Air Installation – Using the Outside Air Kit (99200139)

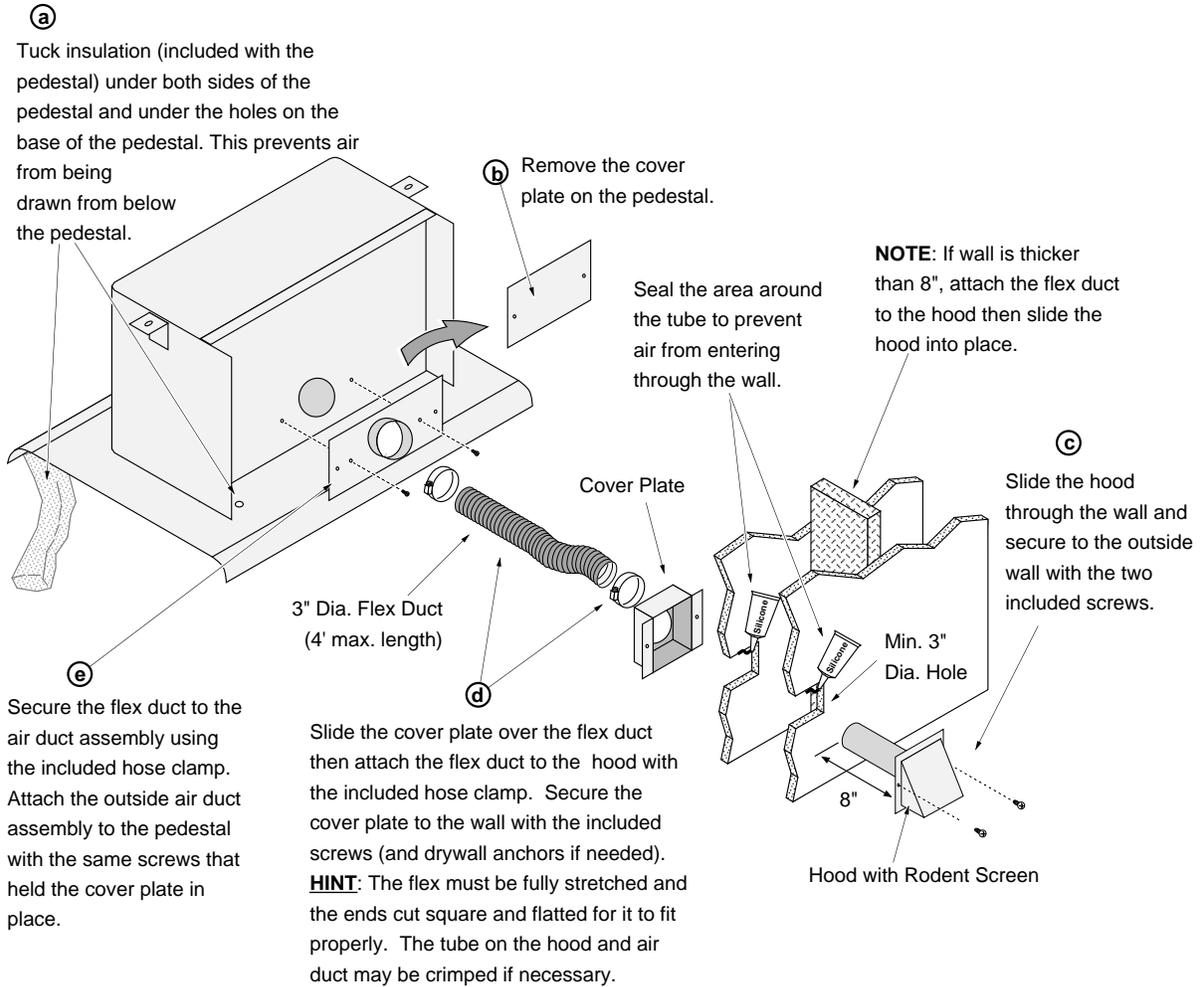

## Outside Air Cover Plate (Required on the Answer ONLY)

When using outside air with the Answer, install the cover plate to insure combustion air is drawn from below.

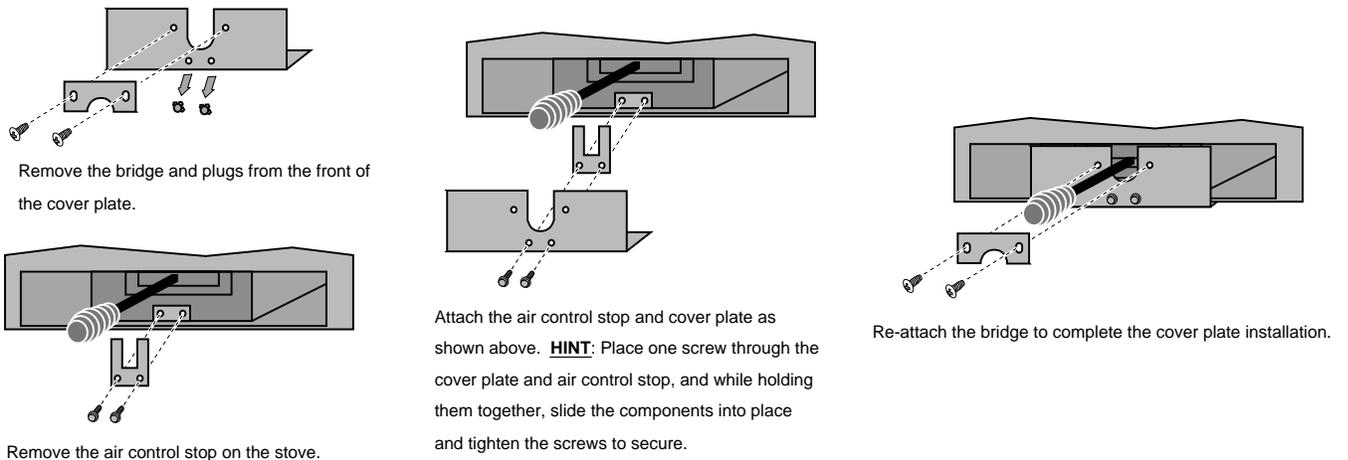



# Small Pedestal (1250 / Answer)

99200122

## Outside Air Installation – Through the Pedestal into the Crawl Space


This pedestal has an internal air duct that may be used to direct air to the firebox. Outside air is then drawn from the crawl space under the stove (check with local building codes for requirements in your area). See the directions below for installation details.

- 1 Determine the location of the hole placed under the pedestal. The illustration below details the location of the pedestal in relation to the front of the stove. The hole should be at least 16 square inches.





### Top View

The faceplate of the Answer is flush with the front edge of the pedestal base.

The faceplate of the 1250 is 1/4" in front of the forward edge of the pedestal base.

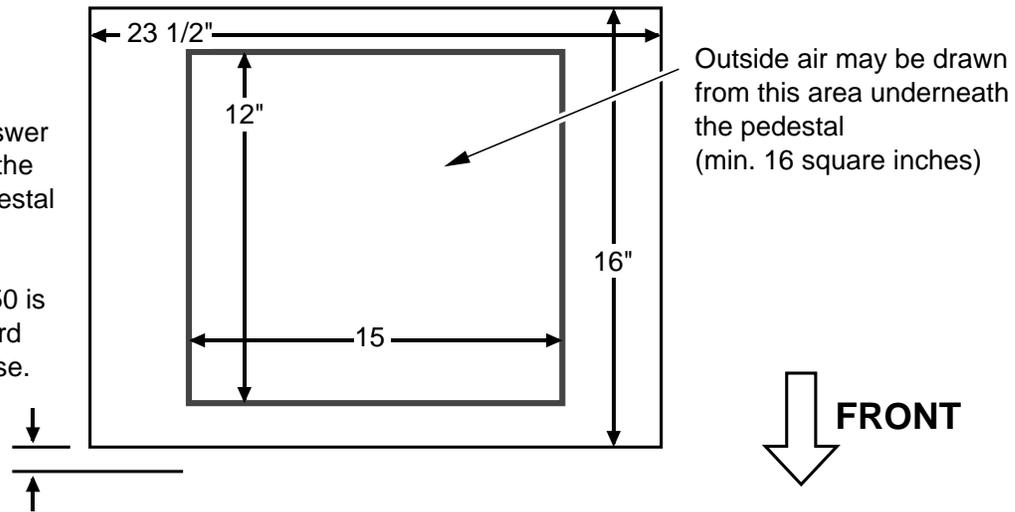

- 2 **Outside Air Cover Plate (Required on the Answer ONLY)** When using outside air with the Answer, install the cover plate to insure combustion air is drawn from below.

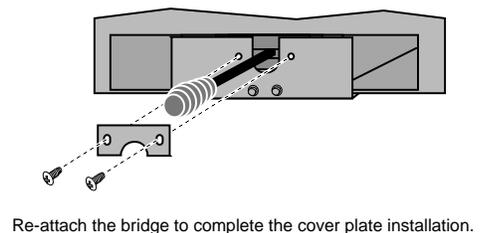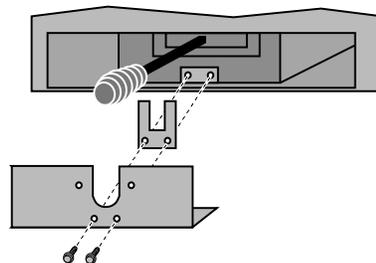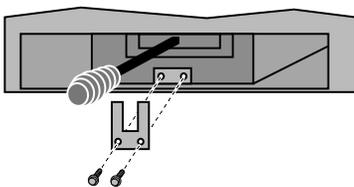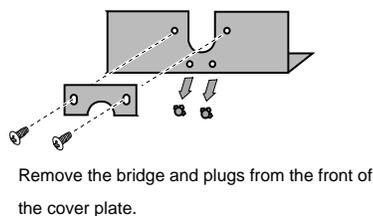




## Small Pedestal (1250 / Answer)

99200122


- 3 Attach the included screen over the hole (staples are included with the pedestal). Place the pedestal in place and tuck insulation under both sides of the pedestal and under the holes in the base of the pedestal (see step "a" on the previous page). This prevents air from entering under the pedestal.

Insulation is used to seal the side edges of the pedestal .



Screen is used to prevent rodents from entering.

Staples are used to attach the screen to the floor.

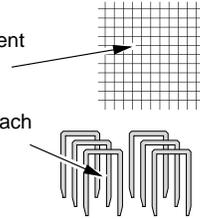

- 4 Attach the stove to the pedestal.