



# DVS Independence Face

SKU 95100327

## Compatibility:

- DVS Insert

## Packing List:

- Backing Plate (Face)
- Left and Right Mounting Brackets
- (6) 10-24 x 1/2" Type F Screws
- Left and Right Doors (with handles and magnets attached)

## Sizing


<u>Width</u>	<u>Height</u>
40-3/8"	29"

## Installation of the Rheostat and On/Off Switch


When using this face you will need to install the on/off switch on the face and the rheostat on the control panel. See the directions below for details.

**WARNING:** Make sure to unplug the heater before installing the rheostat.

Make sure the red and brown wires leading to the on/off switch are firmly attached (they attach to the top and bottom posts on either side of the switch -it does not matter which wire is on top). Route the on/off switch to the slot on the upper right of the face (you will need to remove the lock-tie on the wiring harness). Slide the switch into the rectangular slot until it locks into place.

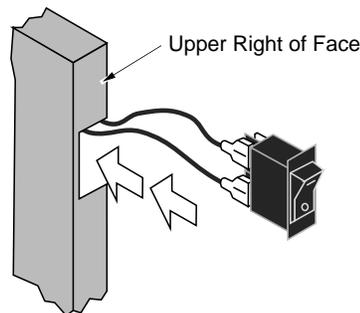

Remove the knob and nut from the rheostat. Insert the shaft on the rheostat through the circular hole on the control panel and secure with the nut. Replace the knob.

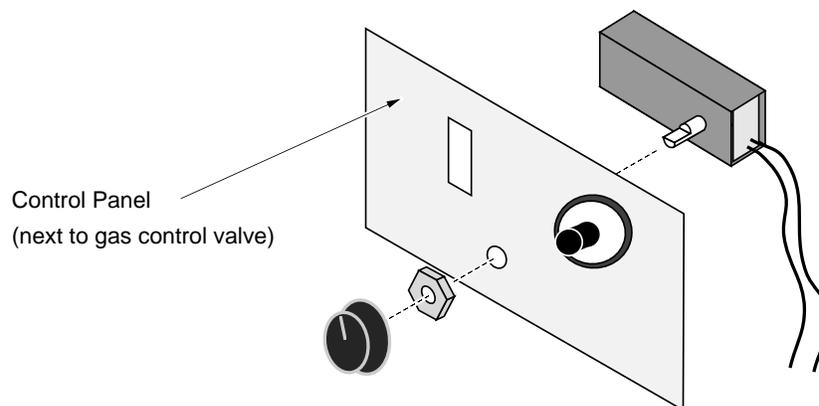




# DVS Independence Face


SKU 95100327

## Mounting Bracket Installation

Remove and discard the mounting brackets on the insert.

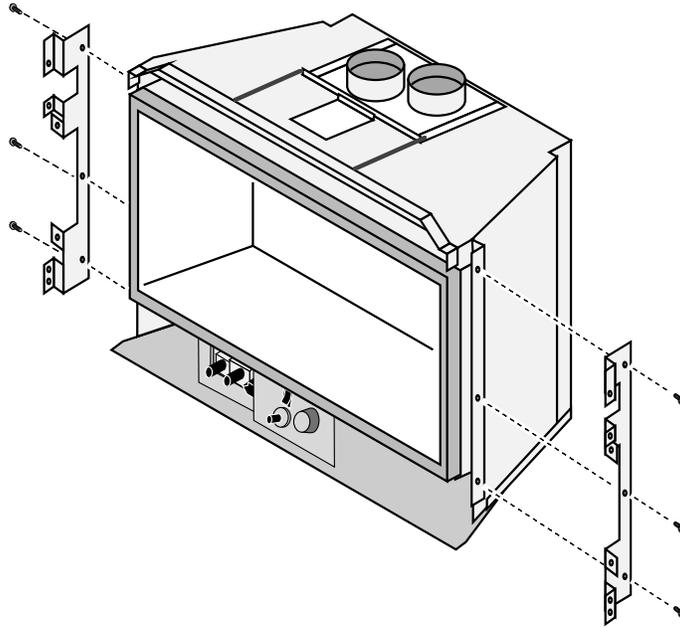

Attach the mounting brackets included with the backing plate.

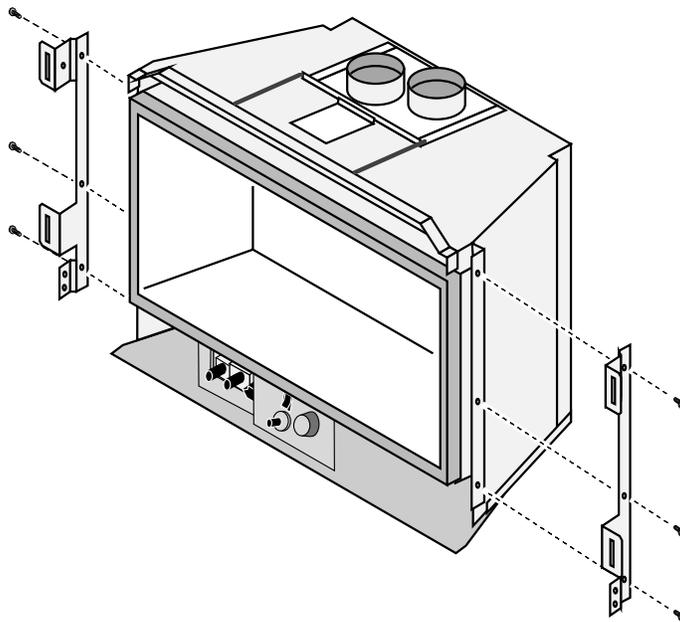




# DVS Independence Face

SKU 95100327

## Backing Plate (Face) Installation

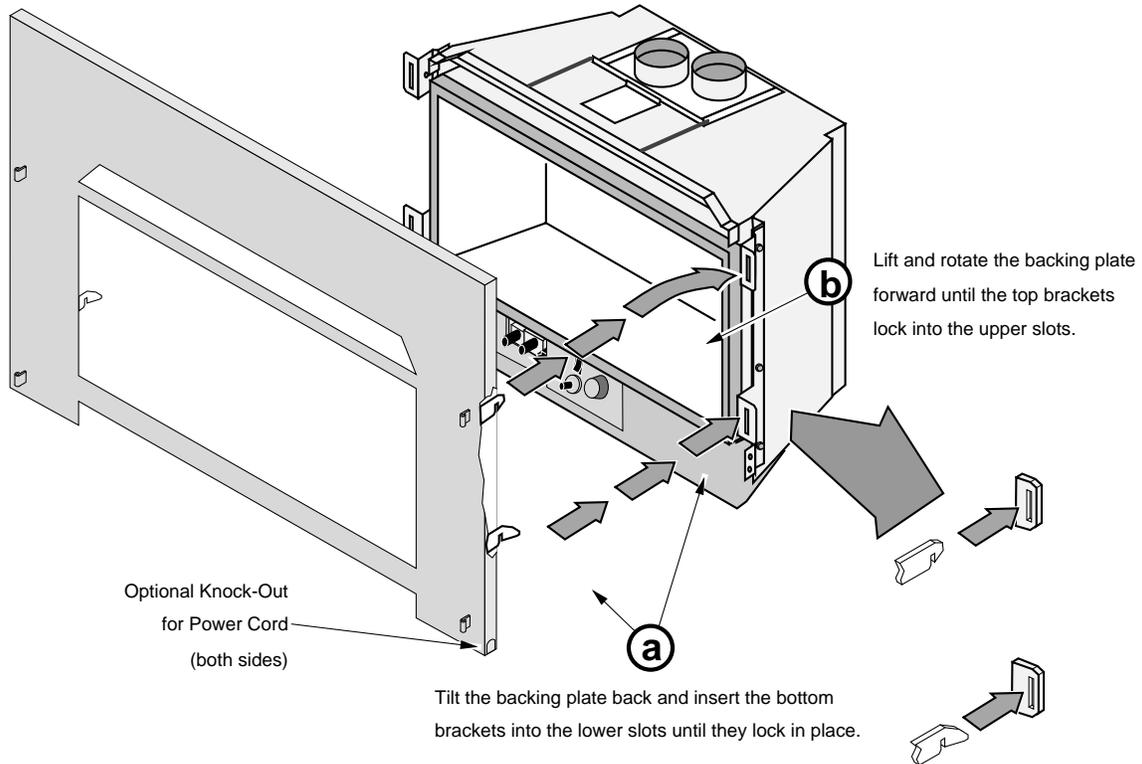




# DVS Independence Face

SKU 95100327

## Door Installation

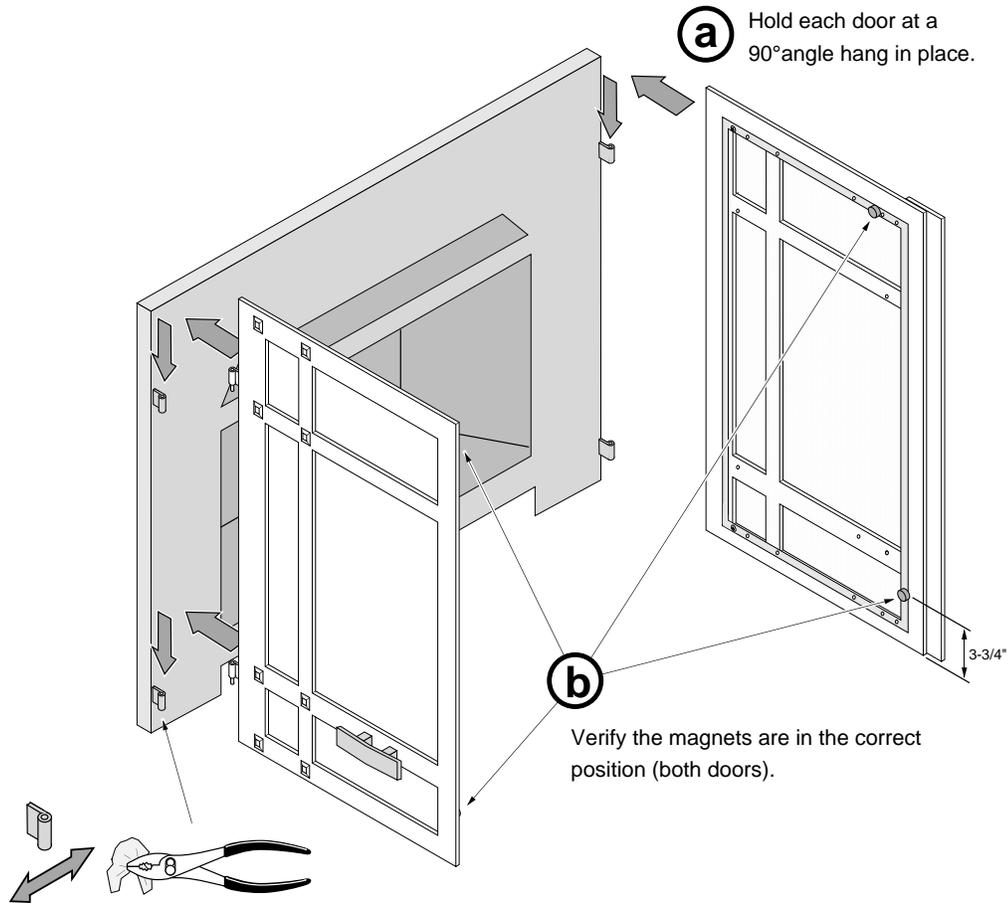


### **ADJUSTING THE HINGES:**

If the gap between the doors is not even, the hinges on either side may be adjusted by bending the hinge tabs in or out. This allows the doors to be aligned left or right, top to bottom.

**NOTE:** place a rag over the hinge posts before grasping the hinge posts with pliers to prevent scratching.

### **ADJUSTING THE DOORS**

Most doors will line up precisely when installed. You may, however, notice a slight mis-alignment between the two doors along the bottom edge. This is easily remedied by opening the door 90°, holding the upper and lower inner edges, and gently "twisting" it. Shut the door, check alignment, and repeat if necessary.

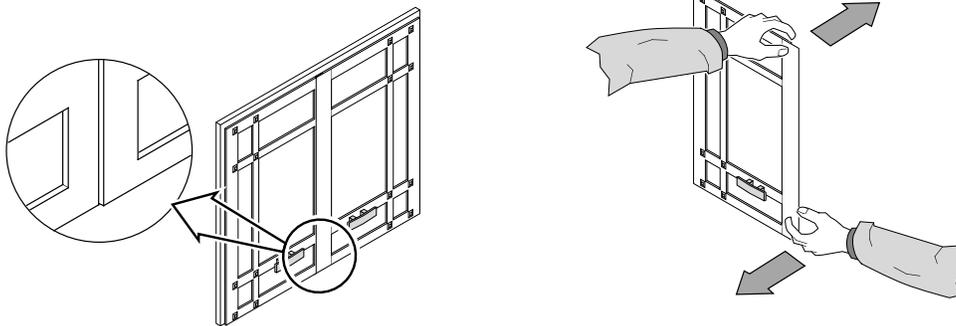



# DVS Independence Face

SKU 95100327

## Using Surround Panels With the Double-Door Face

Surround panels may be used with the backing plate if additional fireplace opening coverage is required. Attach the surround panels prior to attaching the backing plate (see the illustration below).

**NOTE:** When using surround panels with the backing plate, the position of the fireplace insert is moved forward by 1-1/8". This makes the insert protrude farther onto the hearth and moves the flue towards the front by 1-1/8"

**NOTE:** Remove the glass frame before installing the surround panels.

