




# Revised Accent Light Bracket – DVL EF Burner


## Overview

This DVL Ember-Fyre Burner Kit (part # 96900110 built 8/12/15 or later) includes the new rear log with a cavity in the back (see pictures below). This cavity allows for installation of the improved accent light bracket. This bracket is wider, provides better light dispersion, and is offset to allow for ledgerstone firebacks. If you have an older DVL insert (built prior to October, 2015) install this new light bracket to improve accent light performance.

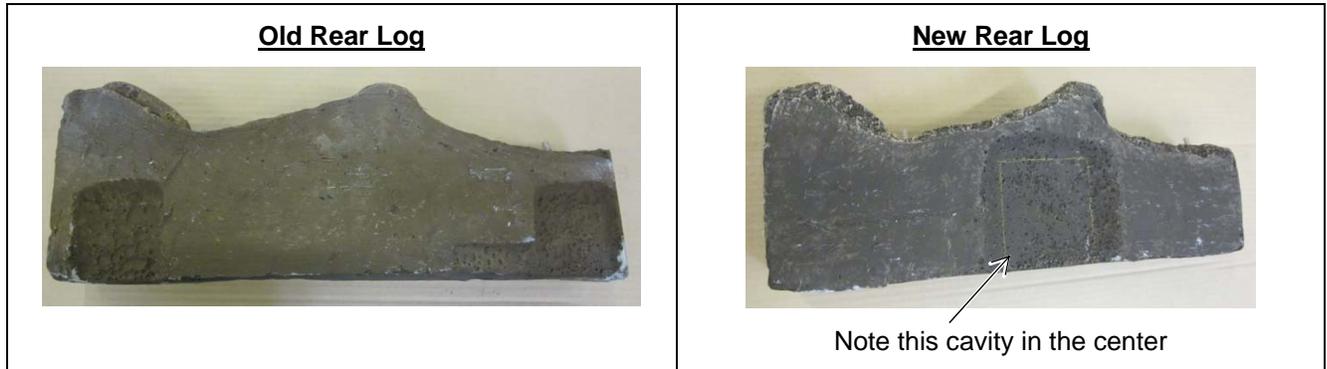



## Packing List

- New Accent Light Bracket

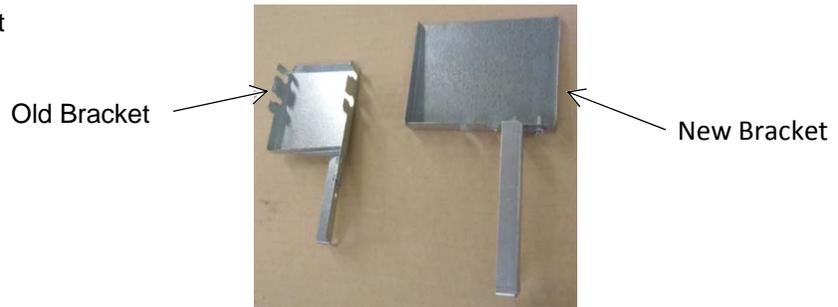

## Installation

1. **Disconnect power to the insert before installing the bracket.** Before installing the burner, remove the old bracket from the insert as shown to the right.
2. Remove the light socket from the old bracket (see illustration below). Install it onto the new light bracket.

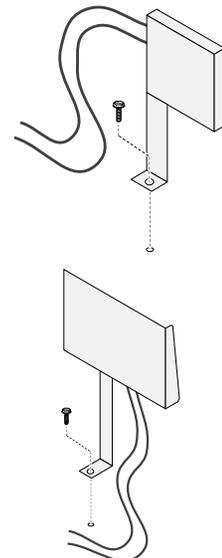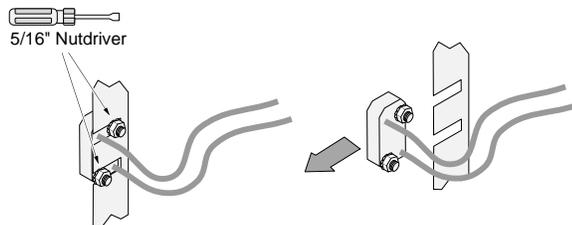

3. Attach the new light bracket to the insert as shown to the right.