



# Revere / 1750i 1 Piece Surround Panel

See SKUs Below

## SKUs


	<b>Height</b>	<b>Width</b>
Custom Panel 96100594	Custom	Custom
Small Panel 96100443	28.5"	40"
Medium Panel 96100444	30.5"	42"

## Packing List

- Panel
- Left & Right Panel Mounting Brackets
- (6) 10-24 Nuts
- (6) 10-24 Pan Head Screws
- Drill Bit

## Installation

1. The insert should be in position, but pulled out slightly to allow access to the sides and top of the insert.
2. Attach the side brackets to the side of the insert following the directions below.

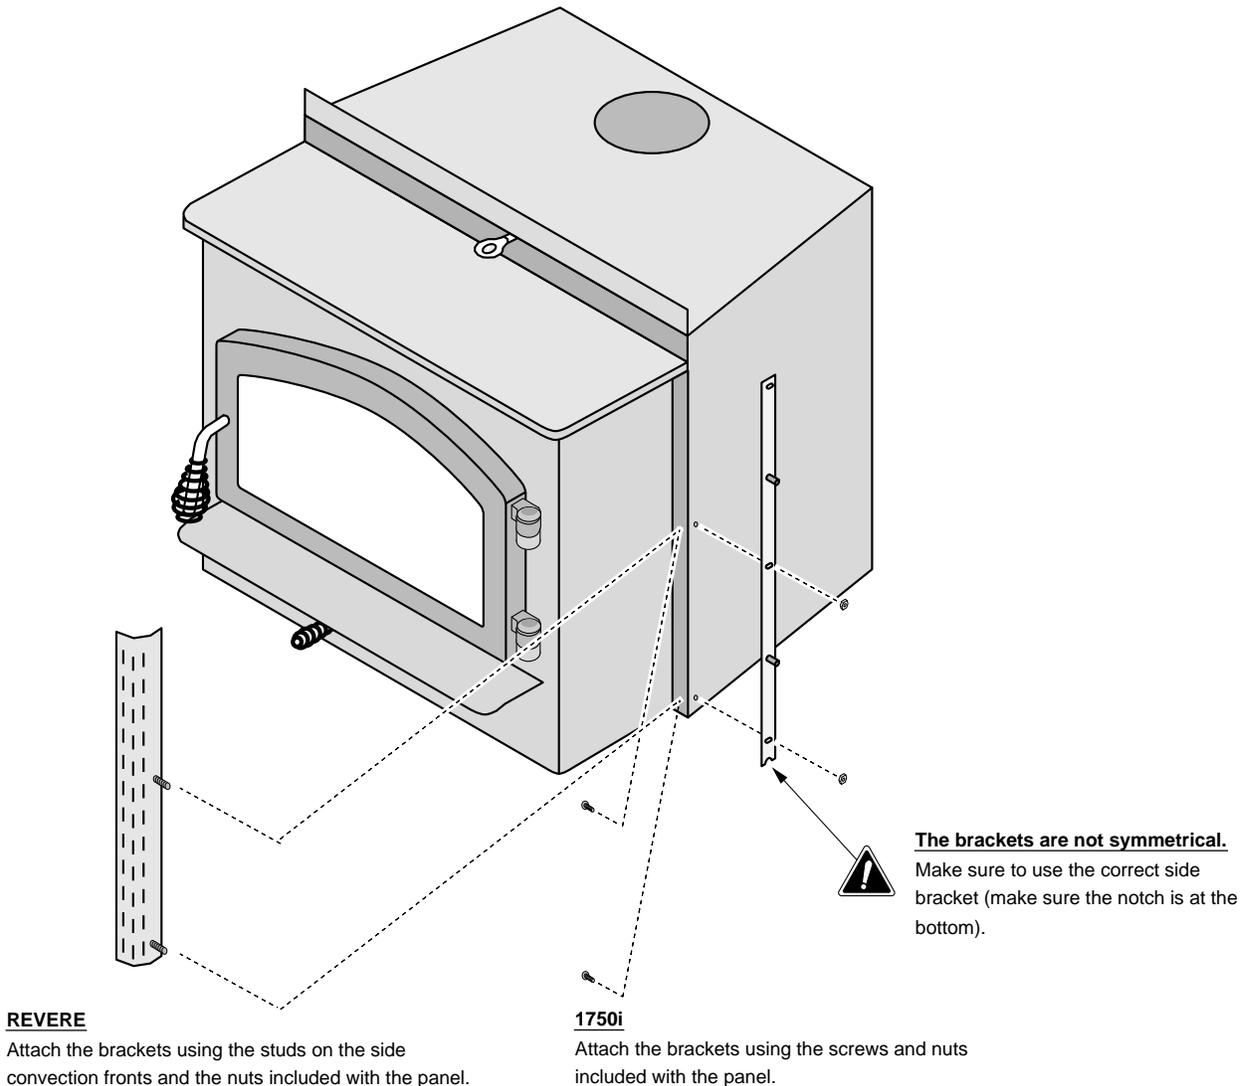




TRAVIS INDUSTRIES  
HOUSE OF FIRE

# Revere / 1750i 1 Piece Surround Panel

See SKUs Below

3. Use the included drill bit to drill a hole into the top convection channel as shown in the illustration below. Use the included screws and nuts to fully secure the side brackets.

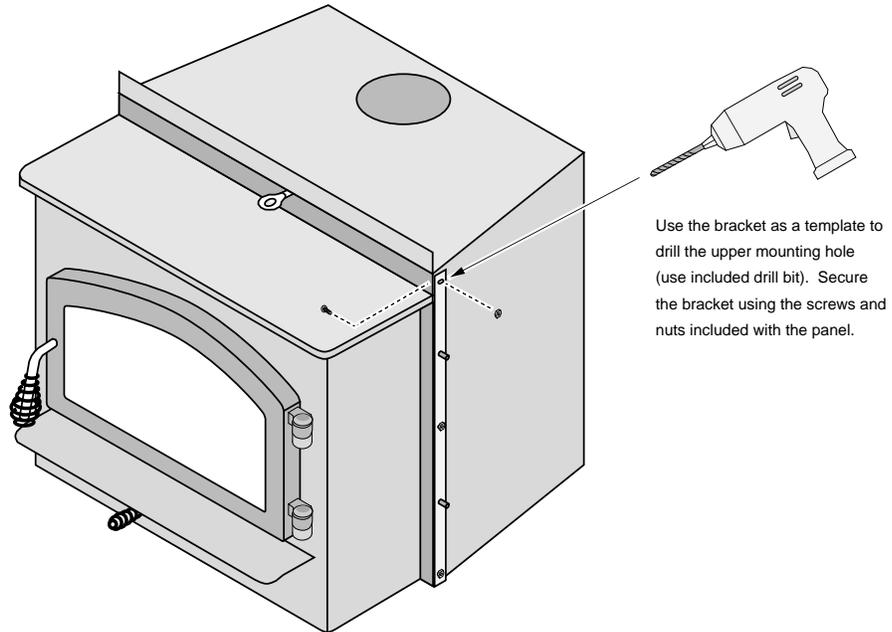

4. Place the insert into position (flue attached). Attach the surround panel as shown below.

